## **LOCK BOX INSTRUCTIONS**



The following pages provide instructions on how to unlock and use each of the three types of devices Altisource uses to secure properties.

Mechanical Lock	Page 2
Digital Lock	Page 3
Lock Box	Page 4

If you have trouble accessing the property, contact Altisource at:

(866) 952-6514

Press "0" for the Main Menu Press "1" for Access Issues

Business Hours: 8 a.m. to 9 p.m. Monday-Friday 10 a.m. to 7 p.m. Saturday & Sunday Eastern Standard Time

**VERIFICATION:** It is recommended that the buyer's real estate agent contact Altisource. Please have all required information available prior to calling:

- Your Agency's Name and Real Estate License
- Property Address
- · Buyer's Name

For the protection of the buyer, assistance with locks will only be provided once license information or vendor ID can be verified.

# **MECHANICAL LOCK**

https://youtu.be/Ngp-LA2aPMA



#### **Unlock Instructions**

- 1) Press "C" to clear and reset (press firmly)
- 2) Enter the access code
- 3) Turn the knob fully (turn to the left for a left-hand door or right for right-hand door), then release
- 4) If the knob will not turn after entering the code, repeat steps 1-3



#### **Lock Instructions**

- 1) Close the door and hold in closed position
- 2) Turn the knob fully (turn to the right for left-hand door and to the left for a right-hand door)
- 3) Check the door to verify it is locked and secure

#### YouTube Video Instructions

 Please use the link provided below: https://youtu.be/Ngp-LA2aPMA

## **DIGITAL LOCK**



### **Unlock Instructions**

- 1) Enter the digital lock access code
- 2) Pull the door toward you
- 3) Press the "Unlock" button
- 4) If the lock does not disengage, repeat steps 1-3



### **Lock Instructions**

- 1) Pull the door toward you
- 2) While holding the door in place, press the lock button
- 3) Check the door to verify it is locked and secure

### **LOCK BOX**



### **Unlock Instructions**

- 1) Use the combination keys on the lock to enter the alpha-numeric access code
- 2) Open the lock box by sliding it open (front may swing open, lift upward or slide to the side, depending on the type of lock box)
- 3) Retrieve the door key from inside the lock box and unlock the door or deadbolt

