



NEW CONSTRUCTION WINDOWS NAIL FIN INSTALLATION



IMPORTANT! READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION.

Follow your local building codes, customs and building practices for additional installation requirements. The manufacturer will accept no responsibility for air or water leakage above, under, or around the window unit. These instructions are general in nature, for detailed installation instructions by product, contact Ply Gem Windows at 1-888-9PLYGEM

(Required) The Rough Opening should be level, plumb, and square, and should be sized according to Figure 1

(Recommended) If a weather resistant barrier is used, follow the barrier manufacturer's recommendations for treatment of window openings.

(Recommended) If pan flashing is used, it should be installed at this time. Follow the pan flashing manufacturer's recommendations (or ASTM 2112 standards), making sure that the product provides an adequate sill dam height to the interior.

(Required) Apply a generous (at least 3/8" bead), continuous bead of exterior-grade sealant to ensure an adequate seal between the back of the nailing fin and the exterior surface of the rough opening (reference Figure 3)



Figure 1

The bead should run along the approximate location of the nailfin holes (if the nailing fin has two rows of holes, apply sealant in line with the inner row). **▲ If using pan flashing, do not seal the lower sill nailing fin so as to provide adequate drainage**

- (Required)** With the window closed and locked, place it in the rough opening and center it from side to side. If the sill of the rough opening is not level and true, place shims as needed to prevent the sill from bowing or sagging (Figure 2), otherwise place the window unit directly onto the sill. If your window is a horizontal sliding window, make sure each meeting rail is supported.
- (Required)** With a single approved fastener (see Chart A), fasten the window through the nailfin through one hole nearest the top center.
- (Required)** Square the window side to side (shimming if necessary—see Figure 2) to maintain square and plumb jambs. Make sure the window sill and head are level and not crowned. A properly installed window will measure the same within 1/16" across the top, middle and bottom, and within 1/8" across the diagonals (this may vary for integral and side-by-side mull units).

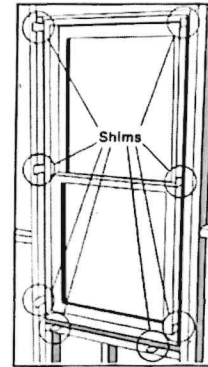



Figure 2

▲ NOTE: Over-shimming can cause bowing and prevent proper window operation.

- (Required)** After checking the operation of the window, complete the fastening by placing fasteners in the provided nailing fin holes, spaced according to Chart A.
- (Recommended)** Following the flashing manufacturers' recommendations apply flashing to the nail fins and surrounding wall surface starting with the bottom, then the sides, and finally the top, creating a shingle effect (reference Figure 4). **▲ NOTE: Where pan flashing is present, do not use flashing that will impede proper drainage of the pan on the bottom.**

PRECAUTIONARY NOTES

- Store windows and doors oriented in upright position (not laying horizontally) in a dry, well-ventilated location not to exceed 6 deep and should be of similar size.
- Keep window and door units out of direct sunlight exposure during storage and remove protective films immediately after installation.
- For trim and siding, allow 1/8"-1/4" gap all the way around the window frame to allow for expansion. If exterior is brick or masonry, leave a 3/8" gap between the bottom sill of the window and the masonry to avoid "brick binding".
- Exterior wall systems like stucco and EIFS must be designed to manage moisture around the window opening.
- Follow the siding manufacturer's requirements for sealing between the siding and window frames.
- Any low-expansion foam used should conform to AAMA 812-04 (see manufacturer's requirements), but any binding or damage of any type caused by the insulation will not be covered under warranty.
- Do not paint any vinyl part of this window for any reason. Painting vinyl will render null and void all warranties.
- Do not block or seal weep holes.

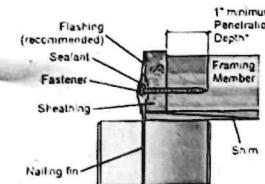

▲ Consult local building codes to verify that sheathing is considered a framing member.

Figure 3 - General Installation

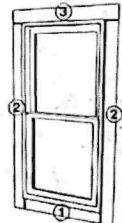


Figure 4

CHART A - Fastener Schedule for New Construction Vinyl

Nailfin Holes to Use for Fasteners	Standard: Every Other Hole Impact: Every Hole
Distance From Window Corners	4" or nearest hole
Bldg Framing Penetration	1" min. (local code may dictate)
Min. Corrosion-Resistant Nail Size	3/8" Minimum Head diameter
Min. Corrosion-Resistant Screw Size	#8 or Larger Pan Head

NOTE: Products may have additional fasteners or instructions attached to the unit that need to be applied during installation. For Florida applications, consult product listing on Florida Building Code website for fastener schedule details.

AW-PC-STAR Certified Highlighted Regions

AW-PC-STAR
E-ENERGY STAR

PWG-M-3-01251-0001
AW-PC-STAR
Un glazed US Lat. GC Anger. No Grid Anger.

VINYL Single Hungs H

ENERGY PERFORMANCE RATINGS		
U-Factor 0.30 (U.S./I-P)	Solar Heat Gain Coefficient 1.7 (Metric/SI)	Solar Heat Gain Coefficient 0.22
ADDITIONAL PERFORMANCE RATINGS		
Visible Transmittance 0.43	Air Leakage ≤ 0.3	

Manufacturer stipulates that these ratings correlate to applicable NFRC product data for determining where product performance. NFRC ratings are determined for a range of environmental conditions and a specific product size. NFRC does not recommend any product and does not warrant the suitability of any product for

Tested in accordance with ASTM E 330
+45/-55

Tested in accordance with ASTM E 90/41.3/1332 for acoustical performance
STC: 27

Glazing complies with ASTM E 1300
Keeper Lite Glazing Lock Lite Glazing
Double-Strength Annealed Double-Strength Annealed
Airspace Airspace
Double-Strength Annealed Double-Strength Annealed

STC: (27) OITC: (26) FWT: ()

FL Prd Approval:
www.plygem.com

P510

D-SO-9893268-2-4



170094000_Rev G_MS_1018